 


THANK YOU FOR CHOOSING YARDCORE



INSTRUCTION MANUAL

LITHIUM ION BATTERY 20V

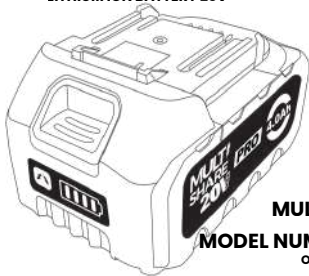

MULTI SHARE BATTERY

MODEL NUMBER YC-MSB-204

ONE BATTERY - MULTIPLE TOOLS

SYMBOLS & SAFETY ICONS

1

PRODUCT SAFETY

3

KNOW YOUR TOOL

9

**CONNECTING THE BATTERY TO
CHARGER**

10

CONNECTING TO TOOLS

11

BATTERY LEVEL INDICATOR

13

BATTERY GUIDELINES

14

MAINTENANCE SCHEDULE

16

TECHNICAL SPECIFICATIONS

18

CHARGER LED INDICATOR

19

CHARGING TIME

20

**MULTI SHARE BATTERY
COMPATIBILITY**

21

STORAGE AND DISPOSAL

22

BATTERY TROUBLE SHOOTING

23

WARRANTY

26

CONTACT INFORMATION

30

THANK YOU

31

SYMBOLS & SAFETY ICONS

Refer to this page for all safety labels and warnings used throughout the manual and on product labels.



General Warning

Indicates a potential hazard. Follow all safety instructions before use.



Read Operator's Manual

Read the manual thoroughly before operating the equipment.



Remove Battery Before Servicing

Always remove the battery before cleaning, transporting, or changing accessories.



Recycle Yardcore Batteries

Do not discard batteries in the trash. When they reach end of life, recycle through Call2Recycle® at 1-800-822-8837 or visit call2recycle.org.



Yardcore Sustainability

One tree planted for every tool, plus support for broader eco-friendly initiatives.



Do not disassemble

Charger contains no user-serviceable parts. Opening the unit may cause injury or void warranty.

SYMBOLS & SAFETY ICONS

Refer to this page for all safety labels and warnings used throughout the manual and on product labels.



Do Not Use in Rain or Wet Conditions

Not intended for use in wet conditions.



Do Not Dispose in Household Waste

Dispose in accordance with local electronic/e-waste regulations.



Electric Hazard

Risk of electric shock. Unplug charger before cleaning or servicing.



HEAT EXPOSURE WARNING

Do not expose the battery to direct sunlight for extended periods or place it near heat sources. Maximum temperature: 50°C (122°F).



Use only Yardcore batteries

Only charge Yardcore MultiShare™ 20V batteries. Using other brands may result in damage or injury.



Recyclable Material

This product or packaging is recyclable. Dispose of it according to local recycling regulations.

SYMBOLS & SAFETY ICONS

Refer to this page for all safety labels and warnings used throughout the manual and on product labels.



Do Not Burn

Do not burn the product or its parts. Risk of fire or explosion.



Do Not Dispose in Waterways

Do not dispose of the product in rivers, lakes, or drains. Follow environmental regulations.



Battery Inside

This label indicates the package contains a lithium battery.

PRODUCT SAFETY

3

For your safety and to ensure optimal battery performance, please follow these important guidelines:

- Use only compatible chargers. Recharge batteries exclusively with chargers from the Yardcore 20V system. Using chargers not designed for this battery type may result in fire or serious injury.
- Install only designated batteries. Use only Yardcore 20V batteries designed for your tool. Incompatible batteries can pose a risk of fire, explosion, or injury.
- Avoid short circuits. Keep unused batteries away from metal objects such as paper clips, coins, keys, nails, or screws. Contact with conductive materials can cause a short circuit, leading to burns or fire.

- Handle leaks with caution. Mishandling may cause battery leakage. If battery fluid comes into contact with skin, rinse immediately with water. If it contacts your eyes, seek medical attention. Leaking fluid may cause irritation or burns.
- Do not use damaged or modified batteries. Cracked, punctured, or altered batteries are hazardous and may behave unpredictably, increasing the risk of fire, explosion, or injury.
- Keep away from fire or high heat. Do not incinerate batteries or expose them to temperatures above 130°C (266°F). Extreme heat can cause batteries to explode.
- Charge within the recommended range. Always follow charging instructions. Never charge the battery or tool outside the temperature range specified in this manual. Improper charging can damage the battery and increase the risk of fire.

Service & Special Safety Instructions

To ensure safe operation and avoid injury or damage, please observe the following service-related and usage safety precautions:

- Do not attempt to repair batteries. Damaged batteries must not be repaired. All servicing and repairs should be performed only by the manufacturer or an authorized Yardcore service center.
- Special Safety Directions for Battery-Operated Tools
- Insert batteries only when the tool is switched off. Inserting the battery while the tool is powered on may result in accidental activation and injury.
- Avoid heat exposure.
- Maximum temperature: 50°C (122°F)

- Charge indoors only. The Yardcore battery charger is designed for indoor use. Charging outdoors or in damp environments may lead to electric shock or equipment damage.
- Unplug before cleaning. Always disconnect the battery charger from the power source before cleaning to reduce the risk of electric shock.
- Do not expose the battery to prolonged direct sunlight or leave it on heating surfaces. Excessive heat can damage the battery and increase the risk of explosion.
- Allow batteries to cool before charging. Charging a hot battery can reduce its lifespan and increase the risk of malfunction or fire.
- Do not open or damage the battery. Never disassemble the battery. Puncturing or crushing can cause internal short circuits, toxic fumes, or fire. If fumes are inhaled, move to fresh air and seek medical attention.
- Use only recommended accessories. Using non-approved accessories may result in electric shock, fire, or tool malfunction. Always refer to compatible Yardcore 20V accessories.
- Follow all tool and charger safety instructions. Refer to your Yardcore 20V Series tool and charger manuals for proper operation, charging, and safety instructions.

⚠️ WARNING: Proposition 65 (California Only)

This product can expose you to chemicals including lead and Di(2-ethylhexyl) phthalate (DEHP), which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, visit www.P65Warnings.ca.gov.

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING: Read all safety warnings and instructions before use. Failure to follow warnings and instructions may result in electric shock, fire, or serious injury.

⚠ WARNING: READ ALL INSTRUCTIONS

FOR ALL YARDCORE TOOLS

1. Avoid Dangerous Environments – Do not use the tool in damp or wet locations.
2. Do Not Use in Rain – This unit is not weatherproof.
3. Keep Children and Bystanders Away – Maintain a safe distance from the work area.
4. Dress Properly – Avoid loose clothing or jewelry that can become entangled in moving parts. Wear protective gloves, sturdy footwear, and secure your long hair.
5. Wear Eye and Face Protection – Use safety glasses or a face shield. Wear a dust mask if operating in dusty conditions.
6. Use Tool as Intended – Operate the machine only for tasks it was designed for. Misuse may cause injury or damage.
7. Do Not Force the Tool – Operate at the designed speed for optimal performance and safety.
8. Maintain Proper Balance – Do not overreach. Keep firm footing and balance at all times.
9. Stay Alert – Operate the tool with full awareness. Do not use it when tired or under the influence of substances.
10. Store Safely – When not in use, store the tool indoors in a dry, secure location away from children.
11. Maintain the Tool with Care – Keep the cutting head sharp and clean.

Follow maintenance instructions for lubricating and replacing accessories.

12. Inspect Before Use – Always check for damaged guards, misalignment, or broken parts. If damaged, have the unit serviced by an authorized Yardcore service center.

BATTERY-POWERED YARDCORE EQUIPMENT

1. Prevent Accidental Starting – Ensure the power switch is OFF before connecting the battery or moving the unit.
2. Disconnect Battery Before Maintenance – Remove the battery before changing accessories, cleaning, or storage.
3. Use the Correct Charger – Charge only with Yardcore approved chargers. Using the wrong charger can pose a fire risk.
4. Use Only Approved Batteries – Only use Yardcore 20V battery packs. Other batteries may cause injury or damage.
5. Avoid Short Circuits – Keep battery terminals away from metal objects such as keys, nails, or coins. Shorting may cause burns or a fire.
6. Handle Leaks Carefully – If battery fluid leaks, avoid contact. Rinse with water if exposed. Seek medical help if fluid contacts the eyes.
7. Do Not Use Damaged Batteries – Replace any battery that is cracked, punctured, or showing signs of damage.
8. Keep Away from Heat & Flames – Do not expose the battery to fire or temperatures above 130°C (265°F).
9. Charge Within Safe Temperatures – Only charge the battery within the temperature range listed in the manual to prevent overheating or damage.

10. Charge Within Safe Temperatures – Only charge the battery within the temperature range listed in the manual to prevent overheating or damage.
11. Service by Professionals Only – Repairs should be performed by qualified technicians using Yardcore approved parts.
12. Do Not Modify – Do not open, alter, or repair the battery pack unless instructed in this manual.
13. Charge in a Safe Area – Do not charge the battery near flammable materials or on combustible surfaces.

BATTERY PACK SAFETY WARNINGS

1. Do Not Dismantle, Crush, or Shred the Battery – Doing so may result in fire, explosion, or chemical exposure.
2. Do Not Expose to Fire, Heat, or Direct Sunlight – Exposure to temperatures above 130°C (265°F) may cause the battery to explode.
3. Avoid Short-Circuiting the Terminals – Keep the battery away from metal objects such as keys, nails, or coins. Shorting may cause burns or a fire.
4. Store Batteries in Original Packaging Until Use – This helps prevent accidental damage or short-circuiting.
5. Avoid Mechanical Shock – Do not drop or strike the battery. Physical damage may lead to dangerous failure.
6. If Battery Fluid Leaks – Avoid contact with skin or eyes. In case of contact, rinse immediately with clean water and seek medical attention.

DO NOT DISASSEMBLE



1. Never disassemble the battery. There are no user-serviceable parts. Opening the unit may result in electric shock or void the warranty.

FIRE AND EXPLOSION HAZARDS



1. Keep the tool and battery away from flames, sparks, and flammable surfaces.
2. Do not incinerate the battery pack, even if it is severely damaged or completely worn out.
3. If the battery emits smoke, an unusual odor, or excessive heat, stop using the product immediately and contact Yardcore Support.

STORAGE AND TRANSPORTATION

1. Store the tool and battery in a cool, dry place away from direct sunlight, heat sources, or moisture.
2. Do not transport the battery where the terminals may contact metal objects. Use original packaging or a protective cover to prevent short circuits.
3. Remove the battery from the tool when not in use or during long-term storage.

EMERGENCY RESPONSE INSTRUCTIONS

1. In case of fire, use a Class D fire extinguisher (recommended for lithium-ion batteries).
2. Do not use water to extinguish battery fires.
3. If battery fluid contacts skin or eyes, rinse immediately with clean water and seek medical attention.
4. If you feel dizzy, nauseous, or experience irritation after exposure to battery fumes, move to fresh air and contact a healthcare provider.

PRODUCT SAFETY

ENVIRONMENTAL SAFETY



1. Dispose of this product, battery, and packaging in accordance with local regulations.
2. Do not dispose of batteries in household waste or throw them in the trash. When they reach the end of life, recycle through Call2Recycle® at 1-800-822-8837 or visit call2recycle.org.
3. Help reduce environmental impact by recycling whenever possible.
4. Yardcore is committed to sustainability. Please recycle responsibly.

KNOW YOUR TOOL

PART LIST & FUNCTION



BATTERY

Yardcore MultiShare™ 20V lithium-ion battery pack. Compatible with all Yardcore 20V and 2x20V tools.

BATTERY RELEASE BUTTON

Press to detach the battery from the charger or tool.

BATTERY PACK LED BUTTON

Press to display remaining battery charge via built-in LED indicator.

BATTERY POWER INDICATOR LIGHTS

Shows the current charge level when the LED button is pressed.

Follow these steps to safely connect your Yardcore MultiShare™ 20V battery to the YC-SSC-12020 Single Slot Charger.

1. INSPECT THE BATTERY AND CHARGER

- Ensure both the battery and charger are clean, dry, and undamaged.
- Check that the ventilation slots are free of dust or debris.
- Do not charge a cracked, swollen, overheated, or visibly damaged battery.

2. PLUG IN THE CHARGER

- Insert the charger's power cord into a standard indoor AC outlet.
- The green indicator light (7) may flash briefly – this is normal when the charger is powered on but no battery is inserted.

3. ALIGN THE BATTERY

- Insert the charger's power cord into a standard indoor AC outlet.
- The green indicator light (7) may flash briefly – this is normal when the charger is powered on but no battery is inserted.

4. Slide the Battery into Place

- Firmly slide the battery into the charger until it clicks into position.
- You should hear or feel a soft click when the battery is fully seated and the release button (2) locks it in.

5. Confirm Charging Status

- The red indicator light (6) turns on to show that charging has begun.
- Once charging is complete, the green indicator light (7) will turn on.
- If no lights appear, or the red light blinks continuously, refer to the Troubleshooting section.

⚠ WARNING:

- Never force the battery into the charger.
- Do not leave the battery unattended while charging.
- Only charge Yardcore MultiShare™ 20V batteries. Using other brands may result in damage or injury.
- Always unplug the charger when not in use.

CONNECTING TO TOOLS**⚠ WARNING:****ATTACHING/DETACHING MULTI SHARE BATTERY**

Do not attach battery until assembly is complete.

NOTICE: Fully charge the battery pack before first use.

 
 
To Attach

Align the battery ribs with the mounting slots in the machine's battery port and slide the battery pack until it snaps into position (Fig. 7a).

To Detach

- Press the battery release button, and the battery pack will disengage from the latch (Fig. 7b).
- Grasp the battery pack and remove it from the machine.

⚠ WARNING: Always be aware of the location of your feet, children, or pets when pressing the battery release button. Serious injury could result if the battery pack falls. NEVER remove the battery pack from a high location.




CONNECTING TO TOOLS

INSERTING & REMOVING THE BATTERY

⚠WARNING: Only insert the battery when the power tool is switched off and ready for use. Inserting the battery into a powered-on tool may cause accidental activation and injury.

 - To insert the battery:
 - Align the battery with the guide track on the tool and slide it in until it clicks securely into place.
- To remove the battery:
 - Press the release button on the battery and pull it straight out of the tool.



BUYING A MULTI SHARE BATTERY OR CHARGER

If your product did not include a battery or charger (e.g., YC-BC4013-NB box), you will need:

- Battery Model: Yardcore YC-MSB-204 (20V 4.0Ah)
- Charger Model: Yardcore YC-DSC-12020 (Dual Slot)

Yardcore YC-SSC-12020 (Single Slot)

All usage, charging, and safety instructions are included in this manual.

Replacement batteries and chargers are available at yardcoretools.com or authorized retailers.

BATTERY LEVEL INDICATOR

Your Yardcore 20V battery is equipped with a multi-level LED charge indicator, which provides a quick and accurate view of the remaining battery life. The indicator appears both on the battery and on the power head of compatible tools.

To check the battery level, press the Battery LED Check Button. The number of bars that light up indicates the approximate charge level:



BATTERY LED STATUS					
% OF CHARGE	0 to 25	25 to 50	50 to 75	75 to 100	

CHARGING THE BATTERY

1. Charge the battery before first use. It is delivered at approximately 70% charge.
2. Connect the battery to the battery charger using the correct procedure.
3. Ensure the charging process is monitored during operation.

NOTICE: The charge indicator is visible both on the battery itself and on the tool's power head, depending on the model.

NOTICE: Recharge the battery when only one bar (|) is shown. Continued use at low charge may reduce battery life.

BATTERY GUIDELINES

USED BATTERIES

- 1.If a fully charged battery delivers significantly shorter operating time, the battery may be worn out and should be replaced.
- 2.Replace only with an original Yardcore 20V battery pack available through our authorized Customer Service.
- 3.Do not attempt to repair or repurpose used batteries.

NOTICE: Always follow local safety regulations and environmental protection guidelines when disposing of used batteries. Refer to the Cleaning and Maintenance section for proper disposal procedures.

BATTERY STORAGE GUIDELINES

Proper storage extends battery life and ensures reliable performance. Follow these tips when storing your battery:

- Remove the battery from the tool before storing for an extended period (e.g. during off-season or hibernation).
- Store partially charged. For long-term storage, ensure the battery has a charge level of 2 to 3 LEDs.
- Check and recharge every 3 months. During prolonged storage, monitor the battery charge and recharge as needed to maintain optimal condition.
- Avoid extreme temperatures.
- Store in a dry, well-ventilated area away from direct sunlight, heaters, or freezing conditions.
- Recommended Storage Temperature:
- 0°C to 45°C (32°F to 113°F)

⚠ WARNING: Storing the battery in extreme heat or cold can reduce performance and battery life.

CLEANING & MAINTENANCE

Your Yardcore 20V battery is maintenance-free and requires minimal care. To keep it in good condition:

1. Clean the battery housing with a dry cloth or soft brush.
2. Do not use water, solvents, or metal objects when cleaning.
3. Do not open the battery casing—there are no user-serviceable parts inside.

⚠ WARNING: Improper cleaning may damage the battery or create a safety risk.

MAINTENANCE SCHEDULE

COMPONENTS	WHAT TO CHECK	RECOMMENDED SCHEDULE	HELPFUL NOTES
Battery Pack	Cracks, swelling, leaks, overheating	Before each use	Stop using and contact Yardcore Support if anything seems off.
Battery Terminals	Dirt, corrosion, or bent contacts	Weekly or every 5 uses	Wipe gently with a dry cloth. No liquids or metal tools.
Battery Charge Level	Charge condition before and after use	Before & after each use	Avoid long-term storage at 0% or 100% charge.
Battery Storage	Kept in a cool, dry, battery-safe location	Ongoing	Store at ~50% (3 LED Bars) charge if not using for more than a month.
Charging Ports	Dust or debris in charging slots	Monthly	Use a soft brush or cloth to clean.

MAINTENANCE SCHEDULE

COMPONENTS	WHAT TO CHECK	RECOMMENDED SCHEDULE	HELPFUL NOTES
Charger & Cable	Frayed cord, bent plug, or heat damage	Monthly	Replace if damaged. Unplug when not in use.
Ventilation Slots	Dust buildup or blockage	Weekly	Keep clear for airflow. Use a dry brush or vacuum.
Storage Conditions	Cool, dry, and safe from direct sunlight	Ongoing	Store indoors. Avoid damp or extreme temperatures.
General Inspection	Any signs of damage or unusual behavior	Monthly	Early checks help prevent malfunction.

NOTICE: For best results, follow this schedule regularly.

Refer to the full manual for safety precautions and service instructions.





TECHNICAL SPECIFICATIONS

18

	YC-MSB-204
BATTERY	LITHIUM ION
BATTERY CELLS	10 CELLS
RATED INPUT VOLTAGE	120V ~ 60 Hz
MAXIMUM VOLTAGE	20 V
RATED CAPACITY	4 Amp-Hours
RATED ENERGY	80 Wh
TEMPERATURE	50 °C (122 °F) MAX
CHARGING RANGE	4 °C to 40 °C (39 °F to 104 °F)
OPERATING RANGE	-20 °C to 50 °C (-4 °F to 122 °F)
STORAGE RANGE	0 °C to 45 °C (32 °F to 113 °F)
POWER TYPE	DIRECT CURRENT (DC)
BATTERY WEIGHT	1.38 Lbs/0.63 Kgs
BATTERY DIMENSIONS LXWXH	120x75x70 mm 4.7x2.9x2.7 "

CHARGER LED INDICATOR



GREEN LED*		RED LED		
● Solid 		● Flashing 	● Solid 	● Flashing 
Without Battery	With Battery	Battery Is Charging	Charging Error**	Battery Error Detected
No Battery Detected	100% Charge	Wait for battery to finish charging	Read Troubleshooting Page	Unplug charger & battery

*YC-DSC-12020 has 2 Battery Slots with 2 LED lights each

YC-SSC-12020 has 1 Battery Slot with 2 LED lights

** If charging takes unusually long time, the charger stops and shows a solid red light.

Only use Multishare Yardcore 20V 4 Ah Batteries

CHARGING TIME

Charger Model	Battery Slots	Charging 1 Battery*	Charging 2 Batteries*
YC-DSC-12020 <i>(Dual Slot Charger)</i>	2	140 mins	140 minutes <i>(charges both simultaneously)</i>
YC-SSC-12020 <i>(Single Slot Charger)</i>	1	140 mins	NA

*Charging times based on Yardcore MultiShare 20V 4.0Ah battery packs under standard conditions. Actual times may vary depending on battery age, temperature & usage.

MULTI SHARE BATTERY**COMPATIBILITY YC-MSB-204** 20V 4 Ah Lithium-Ion

*TOOLS COMPATIBLE**			CHARGING	
20V Series	CORDLESS BRUSH CUTTER	YC-BC4013	SINGLE SLOT CHARGER	YC-SSC-12020
	CORDLESS CHAINSAW	YC-CS4016		
2x20V 40V Max	CORDLESS LEAF BLOWER	YC-LB40120	DUAL SLOT CHARGER	YC-DSC-12020
	And many other tools in the 20V Series and 40V Series			

**Yardcore is continuously expanding its battery platform. Please visit www.yardcoretools.com for the most up-to-date compatibility list.*

***Some tools include batteries and chargers, while others are sold separately.*

Always check product details before purchasing.

STORAGE AND DISPOSAL

BATTERY STORAGE

Remove from tool. Store at 50–75% charge (3 bars). Avoid full charge/discharge. Keep in a cool, dry place. Recharge every 3–6 months if unused.

CHARGER STORAGE

Unplug when not in use. Store indoors, away from dust and moisture. Avoid temperatures below 0°C (32°F) or above 40°C (104°F). Do not tightly coil the cord.

ENVIRONMENTAL NOTE

1. Packaging Materials – Recycle cardboard, plastics, and inserts according to your local recycling guidelines.
2. Batteries – Do not discard batteries in the trash. When they reach end of life, recycle through Call2Recycle® at 1-800-822-8837 or visit call2recycle.org.

3. Tool Disposal – When your tool reaches the end of its life, dispose of it at an official e-waste facility or recycling program.

BATTERY DISPOSAL

call2recycle

- Dispose of this product, battery, and packaging in accordance with local regulations.
- Do not dispose of batteries in household waste or throw them in the trash. When they reach the end of life, recycle through Call2Recycle® at 1-800-822-8837 or visit call2recycle.org.
- Help reduce environmental impact by recycling whenever possible.
- Yardcore is committed to sustainability. Please recycle responsibly.

The table below lists common issues and simple actions you can try if your Yardcore Lithium Ion Battery isn't working as expected. If these steps don't solve the problem, please contact Yardcore Customer Support or visit an authorized service center.

⚠ WARNING: Always switch off the tool and remove the battery before performing any checks or maintenance.

Problems	Possible Causes	Corrective Action
Charger LEDs do not light up	Charger not plugged in	Check plug and wall socket connection.
	Power outlet not supplying power	Try a different outlet.
	Internal charger fault	Contact Yardcore Support.
Red LED stays solid	Charging error or fault detected	Unplug charger and battery. Retry. If issue persists, contact support.

Problems	Possible Causes	Corrective Action
Battery does not charge	Battery not properly seated	Remove and reinstall the battery until it clicks.
	Battery is too hot or too cold	Let battery reach room temperature before charging.
	Battery fully discharged for too long	Try charging for 30 minutes. If no response, replace battery.
Red LED flashing	Battery is not charging properly	Remove battery and reset. If flashing continues, contact support.
Green LED flashing	Battery is charging normally	No action needed. Wait until LED turns solid green.
Green LED solid	Battery is fully charged	Unplug charger and remove battery.

Problems	Possible Causes	Corrective Action
Battery charge indicator doesn't light when button is pressed	Battery is deeply discharged or damaged	Recharge battery. If lights do not respond, replace battery.
Charger feels hot during use	Normal under extended use	Allow charger to cool between sessions. Keep vents clear.
Vents blocked or dusty	Dust or debris buildup	Clean vents with a dry brush or compressed air. Do not use liquids.
Buzzing or clicking noise	Internal Relay Switching	Normal during charging. If loud or persistent, unplug and contact support.

Thank you for choosing Yardcore™. We're committed to delivering high-quality outdoor tools built to perform reliably — season after season — while giving back to the planet.

LIMITED WARRANTY – 2+1 YEARS

Yardcore™ warrants that the tool, battery, and charger, if included with this product, are free from defects in materials and workmanship under normal residential use for a period of **2 years** from the original date of purchase.

When you register your product within **30 days**, Yardcore™ will extend your warranty by 1 additional year, for a total of **3 years** of limited coverage. If a covered defect arises during the warranty period, Yardcore™ will, at its sole discretion, provide one of the following remedies:

- A refund of the original purchase price
- Repair instructions or troubleshooting support
- A replacement, if feasible, through Amazon's platform
- Only one warranty claim is permitted per product.

WHAT'S COVERED

This 2+1-year limited warranty applies to:

- Yardcore™ tools
- Yardcore™ lithium-ion batteries
- Yardcore™ battery chargers

WHAT'S NOT COVERED

This warranty does not cover:

- Normal wear and tear (e.g., scratches, fading, cosmetic wear)
- Damage from misuse, abuse, or neglect
- Commercial or rental use
- Use of non-Yardcore™ accessories or parts

This warranty does not cover:

- Damage due to unauthorized repairs or modifications
- Failure to follow the operator's manual instructions

HOW TO OBTAIN WARRANTY SERVICE

All Yardcore™ products are sold exclusively through authorized retailers.

If purchased on Amazon:
Warranty service for Amazon orders is handled directly through Amazon's return and messaging system for fast support.

To request warranty assistance:

1. Stop using the product immediately.
2. Log in to your Amazon account and locate your Yardcore™ order.
3. Click "Contact Seller" or "Return/Replace Item."

4. Provide:

1. Your Amazon Order ID
2. A description of the issue
3. Photos or video (if applicable)

If purchased from yardcoretools.com or another authorized dealer:
Visit www.yardcoretools.com/warranty for the latest warranty claim instructions and contact details.

NOTICE: Warranty support is only available for items purchased from authorized sellers.

LIMITATION OF LIABILITY

To the extent permitted by law, Yardcore™ shall not be liable for incidental or consequential damages resulting from the use or inability to use this product.

This Limited Warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

WARRANTY

NON-TRANSFERABLE WARRANTY

This warranty is valid only for the original purchaser and is non-transferable. Proof of purchase is required for all claims.

PROOF OF PURCHASE REQUIRED

A valid proof of purchase, such as an original receipt, invoice, or Amazon order confirmation, is required for all warranty claims.

PRODUCT REGISTRATION

To activate your full 3-year limited warranty, please register your product within **30 days** of purchase.

Register your Yardcore™ product for:

- Faster warranty support
- Safety alerts & recall notices
- Exclusive offers and tool tips
- Early access to new products

REGISTER NOW

Scan the QR code or visit:
www.yardcoretools.com/register



Scan QR CODE for Product Registration and activate the +1 Year extended warranty

YOUR PRIVACY

We'll use your email and phone number (if provided) only for:

- Warranty & product support
- Yardcore™ updates and promotions (with your consent)

NOTICE: Registration is optional but helps us serve you better — and is required to unlock your 3rd year of coverage.

WARRANTY VOID CONDITIONS

Your Yardcore™ warranty will be considered void if:

- Used for commercial or rental purposes
- Modified or repaired by unauthorized persons
- Stored improperly or exposed to extreme conditions
- Used outside its intended purpose or design
- False or misleading information is provided in a warranty claim

LEGAL DISCLAIMER

Yardcore™ reserves the right to update product specifications, features, designs, and packaging details at any time, without prior notice, to reflect ongoing improvements or regional requirements. For the latest product updates, manuals, and warranty terms, please visit:

www.yardcoretools.com

Please contact us for any information or support needs.

HEADQUARTERS

ZHEJIANG J SHINE IMP & EXP CO., LTD.
Address: No. 27 Wujiang Avenue,
Shentang Industrial Zone, Jinhua City,
Zhejiang Province, China

MANUFACTURING FACILITY & OFFICE

ZHEJIANG WELLSHINE INDUSTRY & TRADE
CO., LTD.
Shentang Industrial Zone, Baiyang
Street, Wuyi,
Jinhua, Zhejiang, China

CONTACT INFO

EMAIL -
SALES@YARDCORETOOLS.COM

EMAIL -
SUPPORT@YARDCORETOOLS.COM

SOCIAL MEDIA HANDLES

FACEBOOK - @YARDCORETOOLS
LINKEDIN - @YARDCORETOOLS
INSTAGRAM - @YARDCORETOOLS
YOUTUBE - @YARDCORETOOLS

WEBSITE

WWW.YARDCORETOOLS.COM
WWW.YARDCORE.US

BUYING ON AMAZON

Search: "YardcoreTools" on Amazon

Yardcore reserves the right to update product information, specifications, and packaging details as needed based on ongoing improvements or regional requirements. For the latest product updates, support documents, and warranty terms, please visit our official website: www.yardcoretools.com

1 TOOL = 1 TREE PLANTED

For every Yardcore tool sold, we give back by planting a tree through our partnership with One Tree Planted. Learn more about our sustainability efforts at: www.yardcoretools.com/sustainability

YARDCORE MISSION

To provide durable, eco-conscious gardening tools and expert knowledge, enabling families to grow with confidence, care for the environment, and create gardens where they can connect and flourish.

YARDCORE PURPOSE

We are driven to create eco-conscious gardening tools that empower families to build gardens they can be proud of, fostering moments of connection while protecting the planet.

YARDCORE VISION

To inspire and support families in creating sustainable, thriving gardens that bring joy, nurture the earth, and cultivate lifelong memories.

THANK YOU FOR CHOOSING YARDCORE

We're proud to support your yardwork with reliable, battery-powered tools.

Your support fuels our mission to build tools that are better for people, and better for the planet.

**REGISTER
YOUR
YARDCORE
TOOL**

**S
C
A
N**



Scan The QR Code Or Visit: register.yardcoretools.com

 **YARDCORE®**
TOOLS BUILT FOR NATURE